



Cleaning & Maintenance

Markers

IdeaPaint works with industry standard dry-erase markers.

Replace markers frequently to prevent dried frayed tips.

Permanent markers should not be used on the IdeaPaint surface. If permanent markers are inadvertently used removed by cleaning with dry erase cleaner or write over the permanent mark with an Expo 1 dry-erase marker then erase.

Cleaning

Daily erasure and cleaning should be done with a standard dry-erase eraser or a dry cloth. Use clean erasers or a clean damp cloth. For periodic thorough cleaning use dry-erase cleaner.

DO NOT USE:

Harsh solvents or cleaners
Scotch-Brite® or other abrasive pads
Comet®, Soft Scrub®, or other abrasive cleaners
Brillo® pads
Steel wool

Miscellaneous

NEVER apply waxes or other protective coatings to the writing surface. Such applications offer no additional surface protection and interfere with its erasing performance. The use of such products invalidate the warranty.

Caution

- NEVER use organic solvents and abrasive cleaners to clean the IdeaPaint surface. Repeated use of these products will destroy the product's dry-erase performance.
- NEVER use steel wool, powdered abrasives, or active solvent type cleaning solutions to clean the IdeaPaint surface. The use of these products will destroy the product's dry-erase performance.
- NEVER use marker board conditioners or re-surfacers with the IdeaPaint surface.
- Any use of abrasives, solvents, marker board conditioners, or re-surfacers immediately invalidates the IdeaPaint warranty.