

## **Cleaning & Maintenance**

### **Markers**

For best performance, use EXPO regular (“bold”) dry-erase markers. Low odor markers should be avoided as they present performance challenges on all dry erase surfaces and may cause some ghosting depending on the brand and color used.

Replace markers frequently to prevent dried frayed tips.

Permanent markers should not be used on the tabrasa™ surface. If permanent markers are inadvertently used, remove by cleaning with dry erase cleaner or write over the permanent mark with an Expo dry-erase marker then erase.

### **Cleaning**

Daily Erasing and cleaning should be done with a standard dry-erase eraser, dry cotton cloth, or micro-fiber towel. Be sure to use clean erasers. For periodic and more thorough cleaning use a damp cloth or dry-erase cleaner or wipes.

#### **DO NOT USE:**

Harsh solvents or cleaners  
Scotch-Brite® or other abrasive pads  
Comet®, Soft Scrub®, or other abrasive cleaners  
Brillo® pads  
Steel wool

### **Miscellaneous**

NEVER apply waxes or other protective coatings to the writing surface. Such applications offer no additional surface protection and interfere with its erasing performance. The use of such products invalidate the warranty.

### **Caution**

- NEVER use organic solvents and abrasive cleaners to clean the tabrasa™ surface. Repeated use of these products will destroy the product’s dry-erase performance.
- NEVER use steel wool, powdered abrasives, or active solvent type cleaning solutions to clean the tabrasa™ surface. The use of these products will destroy the product’s dry-erase performance.
- NEVER use marker board conditioners or re-surfacers with the tabrasa™ surface.
- Any use of abrasives, solvents, marker board conditioners, or re-surfacers immediately invalidates the tabrasa™ warranty.