


MDC

Standoff Installation Instructions

Standard wood or metal stud anchors.

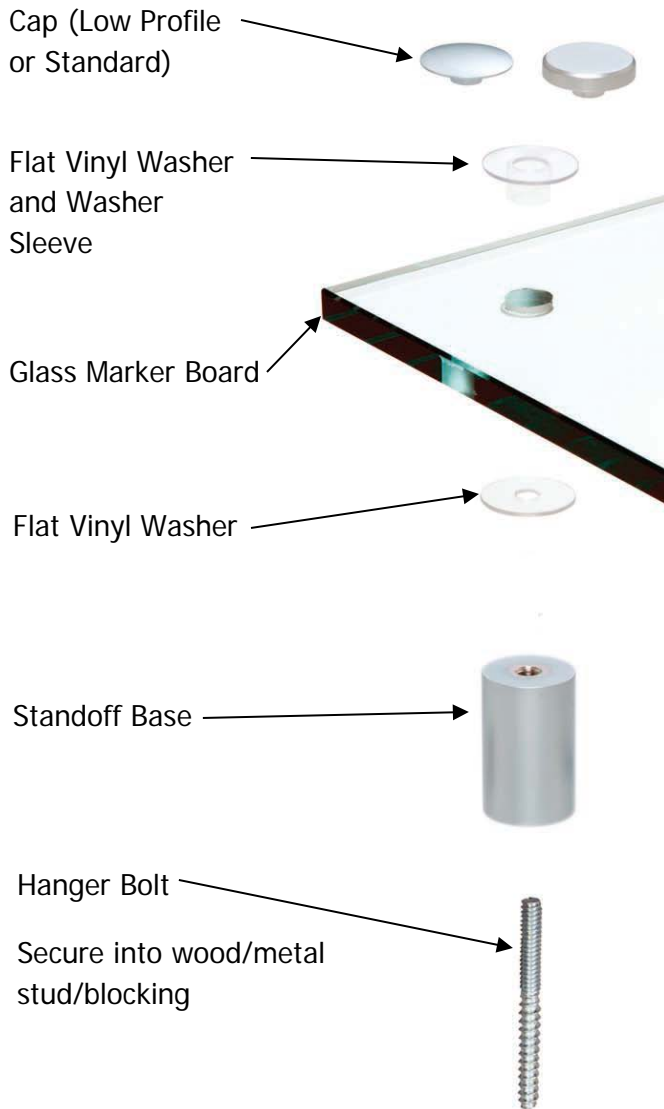

Installation Instructions

1. Assemble standoff into a single hole of the glass marker board. Mark on Hanger Bolt depth to drill into wall. *
2. Disassemble standoff and install hanger bolts into the wall making sure to secure it into a stud or blocking material.
3. Install stand off base on threaded rod as well as flat washer.
4. Install washer sleeve into drilled holes of marker board **
5. Install glass marker board onto threaded rod keeping washer sleeves in place
6. Install flat vinyl washer to front of marker board
7. Install cap making sure to tightly firmly, but not overtighten as to avoid breaking glass markerboard.

* The treaded rod may installed deeper than the midpoint into the drywall, hence the need to mark the installation depth.

** In some assemblies, the washer sleeve and one of the vinyl washers are a single unit rather than two items. It is important to make sure that the drilled holes of the marker board are protected when installing the board as the threaded rod can result in breakage of the board if it impacts the glass incorrectly.